




Mounting "Chain tensioner spring"

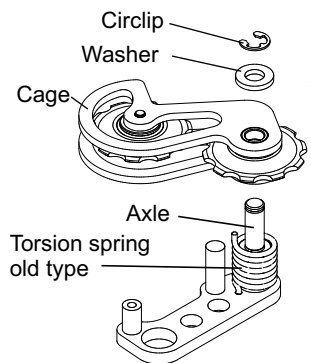


Remove the circlip with a small screwdriver from the axle. Do not use this circlip again. Pull the washer and the cage into the direction of the arrow from the axle. Remove the old torsion spring.

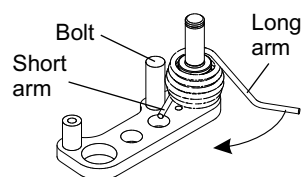


Attach the new torsion spring to the axle like shown in the picture. Turn the torsion spring until it's short arm stops at the bolt. Turn the long arm of the torsion spring over the bolt along the arrow. Keep the spring in it's position.

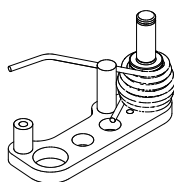


Compare the mounting position of the torsion spring with the picture.

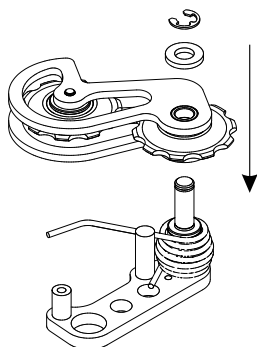

Clean and grease the axle. Attach the cage to the axle turning it back and forth until it stops. Mount the washer and snap in the new delivered circlip.

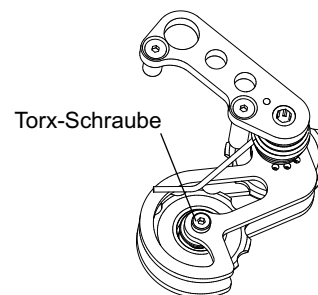


Den Kettenspanner und den langen Schenkel etwa in die auf dem Bild gezeigte Position bringen. Mit einem Torx TX20 T-Griff Schlüssel die Torx-Schraube heraus-schrauben. Diese Schraube wird nicht mehr benötigt.

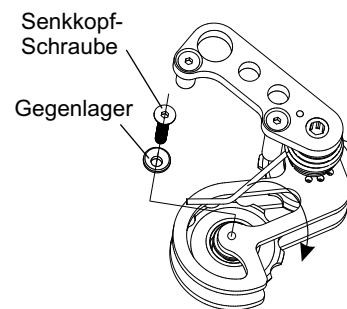

Die mitgelieferte Senkkopfschraube M4x25 - TX20 und das Gegenlager wie im Bild gezeigt montieren. Mit einem Torx TX20 T-Griff-Schlüssel die Schraube mit einem Anzugmoment von 3 Nm / 25 in.lbs anziehen.

Den langen Schenkel in Pfeilrichtung über das montierte Gegenlager hinweg heben und zurückschnappen lassen.

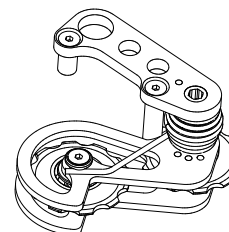

Der lange Schenkel rastet unter dem Rand des Gegenlagers ein und bringt den Käfig in die im Bild gezeigte Position.

Einstellung der Kettenlänge beachten. Den Workshop sorgfältig lesen.