



Thank you for purchasing a Monkey Bone rear disc brake adapter. The Monkey Bone offers a simple method of anchoring the axle of the Rohloff SPEEDHUB 500/14 to a frame through the disc brake mount. In order to use the Monkey Bone, your SPEEDHUB 500/14 will need an OEM2 axle plate, your frame must have an International Standard disc brake interface, and your disc brake caliper must have a Postmount interface. The Monkey Bone is not compatible with IS direct-mount disc brake calipers or frames with Postmount disc brake interface.


Required Tools:

- 5mm Allen wrench
- Torque wrench
- T20 Torx wrench

Required Parts:

- Frame with IS51 disc mount interface
- Disc brake caliper with Postmount interface
- Rohloff SPEEDHUB 500/15 with OEM2 axle plate
- Monkey Bone
- 2x M6x16 bolts (sold separately; typically included with disc brake caliper)
- 2x M6x18-20 bolts (sold separately; often included with disc brake caliper)


Identifying Features

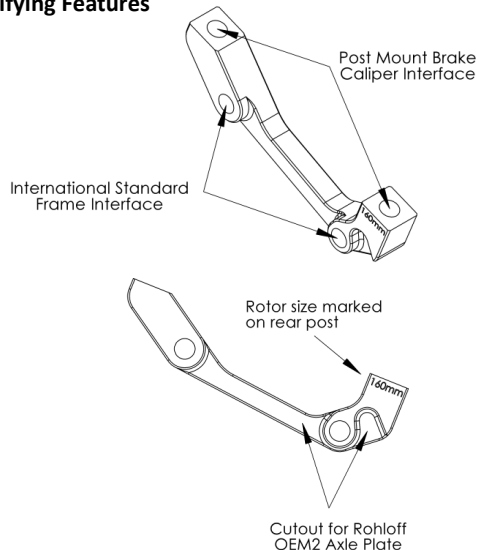

Installation Instructions

1. Ensure that you have the Monkey Bone that is appropriate for your disc rotor diameter (160mm or 180mm; 203mm rotors can be used with 180mm Monkey Bone and spacers (sold separately))
2. Attach the Monkey Bone to the frame using two M6x18-20 bolts. Ensure that slot for OEM2 axle plate faces the dropout. Tighten bolts to a torque of **6 N-m/51 in-lbs.**
3. Connect disc brake caliper to Monkey Bone using two M6x16 bolts. Leave bolts loose enough that caliper can slide side to side.
4. Install wheel into dropout taking care to align slot in end of OEM2 axle plate with cutout in Monkey Bone and disc rotor between brake pads.
5. Check position of EX shift arm with OEM2 axle plate engaged with slot in Monkey Bone; reposition axle plate as needed for desired cable routing using T20 Torx wrench (see Rohloff owners manual). Tighten axle plate screws to a torque of **3N-m/25 in-lbs.**
6. Fully seat axle in dropout before tightening quick-release lever or axle nuts. **Threaded axle nut torque: 35 N-m/310 in-lbs; Pitlock or bolt-on skewer torque: 7 N-m/60 in-lbs.**
7. Follow brake manufacturer's recommendation for setting brake caliper position. Tighten brake caliper bolts to a torque of **6 N-m/51 in-lbs.**

Assembly Views

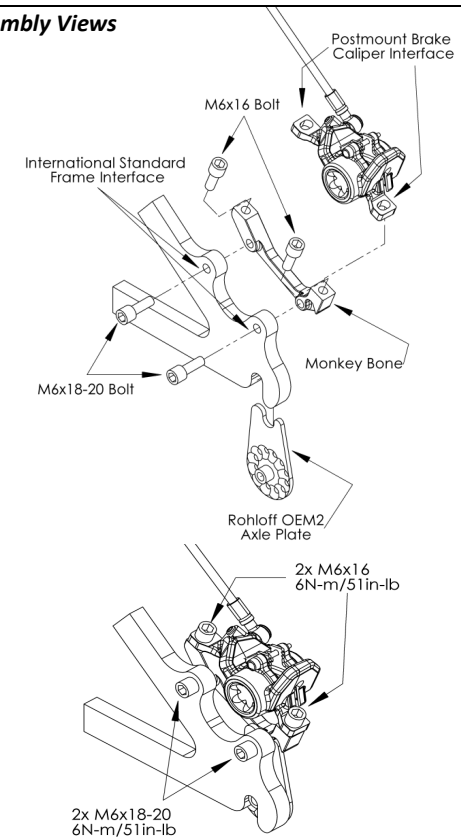


CAUTION:

Use of the Monkey Bone with some frame geometry can result in the wheel being pulled out of the dropout while pedalling due to the forces exerted by the Rohloff SPEEDHUB 500/14 onto the frame. When the anchoring point of the OEM2 axle plate is located in front of a line parallel to the dropout slot, there is a component of the reaction force in the lowest gears that tends to push the axle down and out of the slot. Per Rohloff's recommendation, the Monkey Bone and OEM2 axle plate combination are not recommended for use on frames with such geometry (see page 30 of the Rohloff owner's manual for more info).

Use of the Monkey Bone and OEM2 axle plate is entirely at the user's own risk. The forces applied to the disc brake mount by the Rohloff SPEEDHUB 500/14 can damage some frames. Please contact your frame manufacturer to determine whether this setup is appropriate for your frame and whether it affects your frame warranty.

Recommended

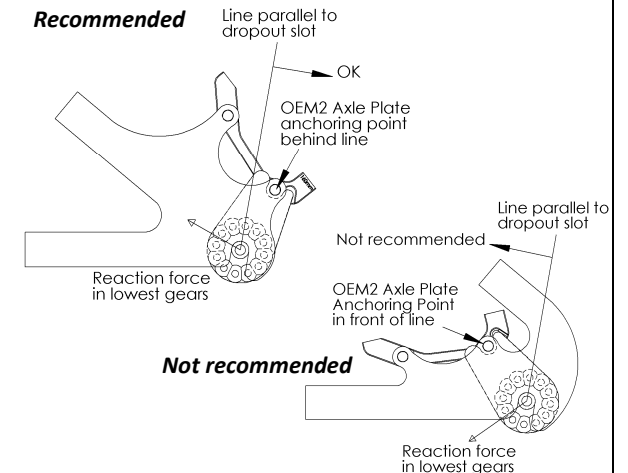



Danke das Sie sich für einen Monkey Bone Postmount Adapter entschieden haben. Der Monkey Bone ist ein Adapter, um das Drehmoment für die Rohloff SPEEDHUB 500/14 direkt auf den Rahmen abzuleiten. Um den Monkey Bone nutzen zu können, brauchen sie eine SPEEDHUB 500/14 ausgestattet mit einer OEM2 Achsplatte, einen Rahmen mit International Standard (IS) für Scheibenbremsaufnahme sowie einen Postmount Scheibenbremsattel (PM). Der Monkey Bone ist nicht kompatibel mit IS Bremsesattel oder Rahmen mit integrierter/direkter Postmountaufnahme.


Benötigte Werkzeuge:

- 5mm Innensechskantschlüssel
- Drehmomentschlüssel
- TX20 Schlüssel

Benötigte Teile:

- Fahrradrahmen mit IS Scheibenbremsbefestigung
- Scheibenbremsattel für Postmountbefestigung
- Rohloff SPEEDHUB 500/14 mit OEM2 Achsplatte
- Monkey Bone für 160mm oder 180mm Bremscheibe
- 2x M6x 16mm Schrauben (regulär im Lieferumfang der Bremsanlage enthalten)
- 2x M6x 18mm bis 20mm Schrauben (regulär im Lieferumfang der Bremsanlage enthalten)


Merkmale:

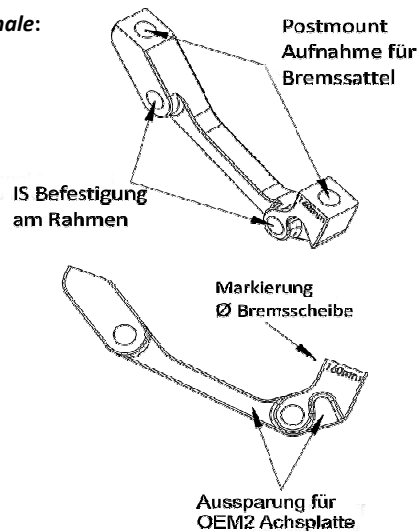

Montage

1. Kontrollieren Sie die Version des Monkey Bone für die entsprechende Bremscheibe (160mm oder 180mm), 203mm Bremscheiben können mit dem 180mm Monkey Bone sowie entsprechenden Distanzscheiben verwendet werden.
2. Den passenden Monkey Bone am Fahrradrahmen mit den zwei M6x 18mm-20mm Schrauben befestigen (**Drehmoment 6Nm**).
3. PM Bremsattel mit zwei M6x 16mm Schrauben auf den Monkey Bone montieren. Lassen Sie die Schrauben vorerst locker, um die Bremse später einstellen zu können.
4. Setzen sie das Laufrad so in den Fahrradrahmen ein, daß die OEM2 Achsplatte komplett in die Aussparung im dem Monkey Bone greift und der Bremscheibe korrekt und schleiffrei zwischen den beiden Bremsklötzen sitzt.
5. Kontrollieren Sie die Zugverlegung ggf. muß die Achsplattenposition verändert (TX20 Schlüssel) werden, um eine optimale Zugverlegung mit möglichst wenig Bögen zu erreichen – siehe Rohloff SPEEDHUB 500/14 Handbuch (**Drehmoment Achsplattenschrauben 3Nm**).
6. Laufrad auf korrekten Sitz im Ausfallende prüfen, sowie richtiges Drehmoment der Achsbefestigung (**TS Achsen max. 30Nm - CC Achsen max. 7Nm**) beachten.
7. Für korrekte Einstellung/Montage des Bremsattels bitte die Herstellerangaben des Bremsenherstellers befolgen. Befestigungsschrauben mit **6Nm** montieren.

Montage Ansicht

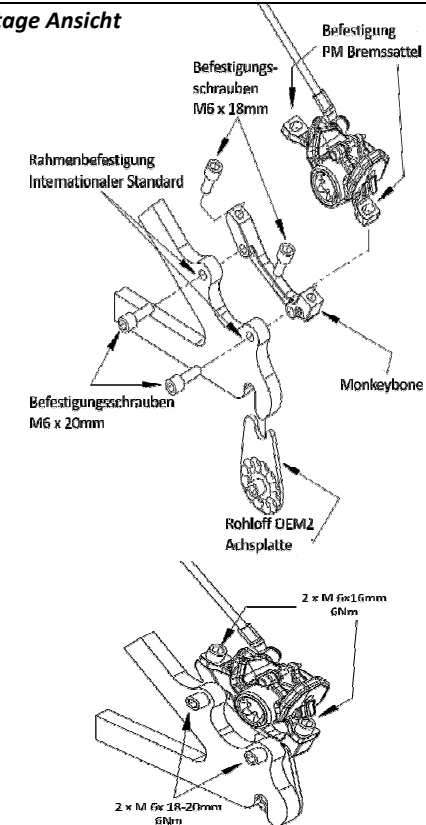

Achtung:

Der Monkey Bone darf nicht an Rahmen verwendet werden wo sich der Befestigungspunkt der Bremsaufnahme (IS 2000) vor der parallelen/senkrechten Linie durch die Achse befindet. In den niedrigen/kleinen Gänge der SPEEDHUB 500/14 wirken sehr hohe Drehmomente (bis zu 98% der über die Kurbel eingeleiteten Kraft) die möglicherweise dazu führen können, daß die Achse aus dem Ausfallende gedreht werden könnte.

Die OEM2 Montage ist nur an Fahrradrahmen erlaubt, die vom Rahmenhersteller dafür freigegeben wurden. Ohne Freigabe des Rahmenherstellers erfolgt der Einsatz dieser Montagevariante auf eigene Gefahr.

Zulässige Montage

